

## Putting Your Swing Gates In Manual Mode DA 20-40 Swing Gates

### Auto - Manual Mode – Without Battery Back Up During Power Failure

To be able to open or close the hinged gate during a power failure, it must be disengaged from the operator (see figure 15.1). If the gate is also secured with an electric lock, the lock must be unlocked with the appropriate key beforehand.

### Manual – Auto Mode – Without Battery Back Up During Power Failure

Once the power supply has been restored, the gate must be reengaged with the operator (see figure 15.2). A necessary reference run in the CLOSE direction is automatically performed during the next command impulse following a power failure. During this reference run the option relay clicks and a connected warning lamp flashes slowly.

### Disengaging Without A Power Failure

After reengaging the gate, the voltage supply must be disconnected once so that a new reference run is automatically performed in the CLOSE direction.

